SAFETY GUIDE - PLEASE READ CAREFULLY

- Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.
- Read all the instructions carefully before using this appliance and keep them for future reference.
- Retain the manual. If you pass the product on to a third party, make sure to include this manual.
- Unplug the appliance from the mains supply when not in use, or before cleaning any part of the appliance.
- This appliance is for household use only.
- Do not use outdoors or in damp or wet conditions.
- Do not immerse the appliance or the electrical cord or plug in liquids.
- Do not use the appliance near a fire, oven or other source of heat.
- Place the appliance on a stable and flat surface where there is no risk of it tipping over or being knocked over.
- Ensure that there is enough space for the heater while operating. There should be at least 1m in front of the heater and 50 cm behind the heater.
- DO NOT place the appliance immediately below an electrical socket or other appliance.
- Do not use the heater in front of or close to an open window. Rain may create an electrical hazard.
- Keep flammable and explosive objects away from the heater.
- DO NOT hang the appliance on a wall, furniture, etc.
- DO NOT use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
- DO NOT place the appliance close to children or pets. Never let children operate this appliance. Close supervision is necessary when this appliance is used near children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- When unplugging the power cord, hold the plug top, not the power cord.
- Store the appliance away from direct sunlight and out of the reach of children.
- DO NOT touch the heater inlet or outlet when the appliance is operational. RISK OF BURNS.
- Do not cover the heater or use it to dry laundry ot towels.
- Do not place soft objects or fabrics over or in close proximity to the heater or otherwise obstruct the inlet or outlet.
- DO NOT insert any objects into either the air inlet or the outlet of the appliance.
- There are no user serviceable parts in your appliance. Unauthorised dismantling or servicing will void the product warranty.
- Do not operate the appliance with a damaged cord or plug or after the appliance or any component has been damaged. Send the heater to a suitably qualified or appointed service agent for inspection and repair.
- Do not use the appliance for any purpose not expressly specified in this manual.
- THIS APPLIANCE MUST BE ATTENDED AT ALL TIMES WHEN IT IS SWITCHED ON

ELECTRICAL INFORMATION

- Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the rating plate on the back of the appliance.

TESCO
CH10 Convector Heater User Manual

CONTROLS AND FEATURES

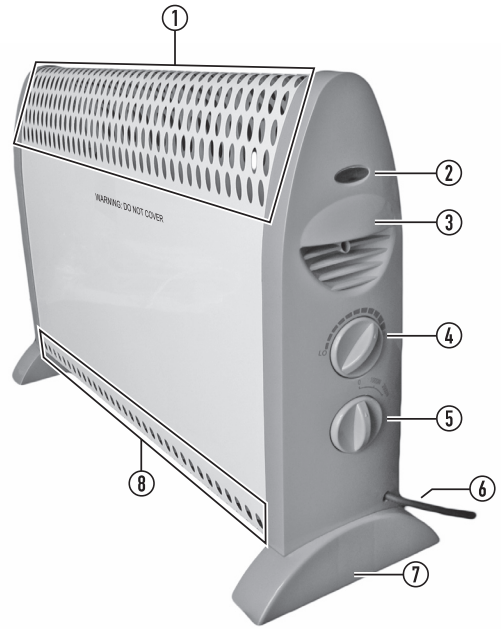

1. Air outlet vents
2. Power indicator
3. Carrying handle
4. Temperature control
5. Power selector switch
6. Power cord
7. Foot
8. Air inlet vents (side and underside)

PREPARATIONS FOR USE

Remove all exterior packaging from the heater. The feet are packed separately with their fixing screws and must be fitted before the heater is used. If you dispose of any packaging please do so according to any recycling regulations.

FITTING THE FEET

1. Locate the two ribs underneath the heater side panels as shown on the right.
2. Slide the foot fully onto the sidepanel ribs.
3. Fix the foot to the flange as shown with the screw supplied.
4. Fit the other foot in the same way.

CAUTION: It is essential that the feet are correctly fitted before using the heater to ensure that the appliance is stable and that adequate clearance is available for the air inlet vents.

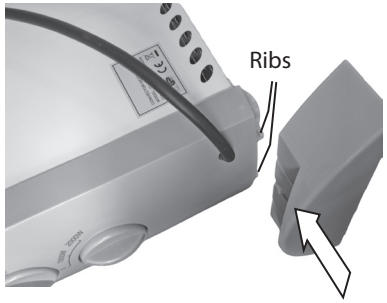

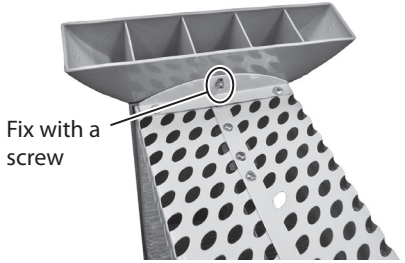

TESCO

CH10 Convector Heater User Manual

OPERATION & CONTROLS

1. Position the heater in the room, ensuring there is at least 1m clearance in front of the heater and 0.5m behind. Check that the inlet and outlet vents are unobstructed. and that the heater is positioned well away from flammable materials such as curtains, tablecloths etc.
2. Set the power selector to the '0' (off) position.
3. Connect the mains plug to a mains outlet and switch on the power at the outlet.
4. Turn the power selector to the 1000W (low) or 2000W (high) setting to switch the heater on.
   - Choose the 1000W setting for smaller rooms or where the heater is to be used for background heat.
   - Choose the 2000W setting for larger rooms or where a greater rise in temperature is needed.
5. Turn the temperature control clockwise to the maximum position (HI).

The power indicator will light and the heater will begin to warm the room.

CAUTION: Do not touch the main body of the heater when operating - danger of burns.

6. When you feel the room temperature is comfortable, turn the temperature control anti-clockwise slowly until the power indicator extinguishes.

The thermostat will now switch the heater on and off to keep the room at this temperature.

AFTER USE

1. Turn the power selector to the '0' (off) position. Disconnect the plug from the mains.
2. Allow the heater to cool fully before moving it to a safe place, away from children and pets.

CARE AND MAINTENANCE

Ensure that the appliance has cooled completely and is disconnected from the mains before cleaning it.

Use a barely damp cloth to clean the surface of the appliance. Ensure that no liquids penetrate the heater casing.

Do not use abrasive chemicals, steel wool. scouring or abrasive pads on any part of the heater.

Dry thoroughly before re-use or storage.

SPECIFICATIONS

Model:.....CH10 Convector heater
Voltage: .....220-240 V~, 50 Hz
Power consumption:.....1700 - 2000 W
Net Weight:.....2.7 kg

CE

IMPORTANT: THIS APPLIANCE MUST BE EARTHED.

WARRANTY

Your appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights

UK: Waste electrical products /batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities.

See www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products/ batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

TESCO
Tesco Stores Ltd
Delamare Road, Cheshunt, Herts, EN8 9SL

TESCO

User manual

CH10

Convector heater